

Advice for correct fitting of the kit : Do not fully tighten the bolt until it's ensured that the KIT is correctly attached and aligned.

Cara pasang yang benar : Jangan sepenuhnya kencangkan baut sampai dipastikan bahwa KIT terpasang dengan benar dan selaras.

1.



Disassembly the handle pillion from motorcycle
(Lepaskan handle pillion dari bodi motor)

2.




Disassemble the pin and plain washer of the pillion step.
(Lepaskan kawat besi dan pin baut dari pijakan kaki)

3.



Assembly No.2(Upper&Lower KIT) with No.3 (Bolt M8xL55)
(Pasang No.2(Upper&Lower KIT)dengan No.3(Bolt M8xL55))

4.

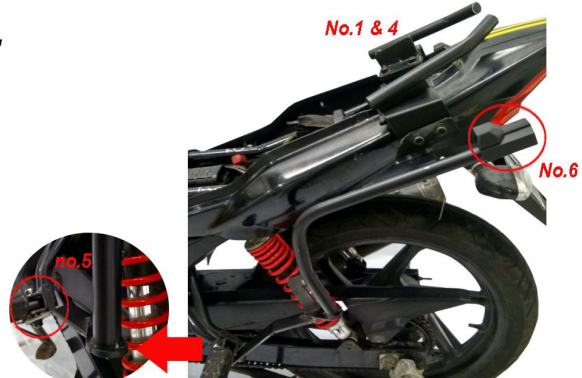

Install No.6(Plug SH36 & Screw), 3P Kit(No.1) with No.4(bolt M8xL35) and Replace pin also wire standard with No.5(bolt M8xL25) in footstep
(Pasang No.6(Plug SH36 & Screw),bracket 3P dengan No.4(baut M8xL35) dan ganti pin juga kawat standar dengan No.5(baut M8x25)pada footstep)

5.



Once KIT is securely positioned on right and left then please tighten all bolts
(Setelah bracket terpasang rapi antara kiri dengan kanan maka kencangkan semua baut pada motor)

Note :

If you want to install 3P KIT and Top Kit together then you should disassembly upper KIT (No.2)



(Jika anda ingin memasang bracket 3P dan bracket Top bersama maka anda bisa melepas bracket atas (No.2))

COMPONENTS / PARTS :

Pos.	Ref.	Cant.	
1	H0VR001		1 SET 3P KIT
2	H0VR002		1 SET Upper and Lower KIT
3	H0VR003		4 SET Bolt M8xL55 + 4 Washer M8 + 4 Bussing L10
4	H0VR004		4 SET Bolt M8xL35 + 8 Washer M8 + 4 Nut M8 + 4 Split-lock Washer M8
5	H0VR005		2 SET Bolt M8xL25+ 2 Washer M8+ 2 Nut M8 + 2 Bussing L5
6	H0VR006		2 SET Plug SH36+ 2 Screw M4xL20