


# SHAD

SUZUKI VSTROM SX 250 '23  
3P KIT SOVS23IIF

3P  
SYSTEM

DESIGNED IN  
BARCELONA

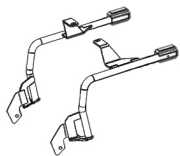

1 SOVS23IIF-IM x1



2 EOD017 x2  
M8 X 40 DIN 912



3 EOD028 x4  
WASHER M8



4 EOD014 x2  
M8 X 25 DIN 912



5 EOD064 x4  
WASHER M8X24



6 EOD035 x2  
NYLON NUT M8

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

